



J = 24" Black PVC Post K = Rolling Base

Note: 40lb Sand Bag/Weight required but not included

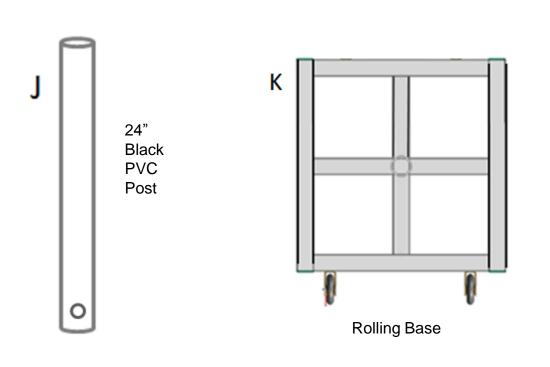




Step 1

Slide 24' black pvc post (J) into center post of the rolling base (K). See Figure 1

Step 2

Make sure to line up the hole in the bottom of the 24" black pvc post (J) with the threaded knob on the side of the center post Hand tighten the threaded knob just enough to keep the pvc post from sliding out. See Figure 1.

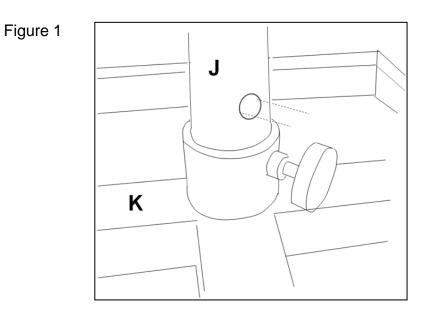

FlaggerJoe